Readme Colour

USER GUIDE

Important: Please charge the Reader for at least 10 hours before using it for the first time.

1 WELCOME

Thank you for purchasing our product! *Readme Colour* has been developed using the latest technology. This product features a 7-inch TFT colour display and lightweight portability.

You can use the Reader to:

- *Read eBooks (PDF, e-PUB, TXT and FB2 formats)*
- *Store and view photos (JPEG, GIF, PNG and BMP formats)*

Please read this user guide carefully before using the product so that you can fully enjoy its performance and functions. We hope you enjoy using our product.

2 IMPORTANT

Please RESPECT COPYRIGHT. Binatone is not liable for any infringement of copyright arising from the use of pirated content.

3 WHERE CAN I GET eBOOKS FOR MY READER?

An eBook, which is short for electronic book is essentially the digital version of a paper book.

The Reader supports eBooks in PDF, e-PUB, TXT and FB2 formats. eBooks can be downloaded with a computer via an Internet connection.

You can download eBooks in various formats from Online ebook stores such as:

- Waterstones - http://www.waterstones.com
- Project Gutenberg - http://www.gutenberg.org/wiki/Main_Page
- The Burgomeister's Books - http://truly-free.org/
- MemoWare - http://memoware.com/

Note

We strongly recommend that you download eBooks only from reliable and secure websites. Always check with the store before making your purchase, otherwise, you could end up paying for eBooks which you are unable to read.

4 WHAT IS DIGITAL EDITIONS?

Digital Editions offers an engaging way to view and manage eBooks and other digital publications. You can use it to download and purchase digital content, which can be read both online and offline, transfer copy-protected eBooks from your computer to other computers or devices, organise your eBooks into a custom library and annotate pages.

IMPORTANT

When you copy DRM books from the computer to the Reader, a *manifest.xml file* will be created automatically. Do not delete the *manifest.xml* file as it is stores the copyright information of the eBook and allows you to open the eBook on the Reader.

4.1 Installing Digital Editions on your computer

You can install **Digital Editions** on your computer in a number of different ways.

You may be prompted to install **Digital Editions** when you purchase an item from an online store, such as **www.waterstones.com**. In this case, installation is part of the download process. The following is an example:

1 After you have purchased an item from the online store, click on the download link.

2 Your browser may prompt you for the application to open the file (which is a licence for the eBook and not the eBook itself).

3 Select '**Digital Editions**' if prompted and choose to open the file.

4 **Digital Editions** should load if not already loaded.

5 **Digital Editions** will load the licence file, download the eBook and add it to your library.

6 Plug in your eBook Reader if not already plugged in, using the supplied USB cable. See *"Transferring files from your computer to the eBook Reader" on page 15* on how to connect your eBook Reader to the computer.

7 Copy the eBook(s) to your eBook Reader by dragging and dropping them from the '**Library view**' onto the **Storage Card** in the left hand panel.

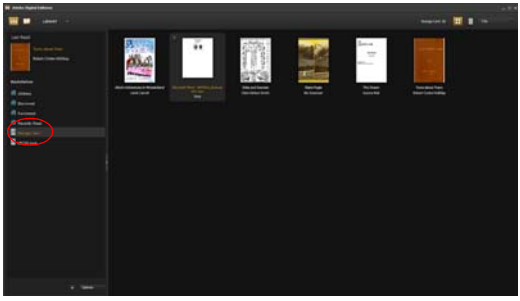

8 If the eBook is large, a progress bar may appear as the eBook is being copied.

9 Exit **Digital Editions**.

10 Once **Digital Editions** is closed, click **"Safely Remove Hardware"** icon on the system tray of your computer, select the eBook drive and disconnect the USB cable when confirmation is given that it is safe to remove.

Your eBook is now loaded to your eBook Reader and can be read.

Another way is to download it from the Internet.

1 Click the **Install** button.

Hint:
If the buttons says **Launch** instead, then you have already installed **Digital Editions**; you may click the **Launch** button to open **Digitial Editions** directly.

2 Click **Install** again.

Digital Editions Installer
This application can read and write files to your system. Would you like to continue installing?
Install
Cancel
Installing applications may present a security risk to you and your computer. Only install from sources that you trust.

3 Click **Yes**.

4 Wait for **Digital Editions** to finish downloading.

5 Click "**I Agree**".

Digital Editions - Installation
This installer will setup Digital Editions.
Please review and agree to the license agreement to continue.
ADOBE SYSTEMS INCORPORATED
ADOBE WARRANTY STATEMENT AND SOFTWARE LICENSE AGREEMENT.
ADOBE DIGITAL EDITIONS
NOTICE TO USER: PLEASE READ THIS DOCUMENT CAREFULLY.
THIS DOCUMENT INCLUDES WARRANTY INFORMATION [PART I] AND A
LICENSE AGREEMENT GOVERNING USE OF ADOBE SOFTWARE [PART II].
[PART I. WARRANTY DISCLAIMER AND LIABILITY LIMITATION.
NO WARRANTY. The Software [as defined below] is made available by
Adobe on an "AS IS" basis and WITH ALL FAULTS. EXCEPT FOR ANY
WARRANTY, CONDITION, REPRESENTATION OR TERM TO THE EXTENT
By clicking the "I AGREE" button I acknowledge that I have read and accept the
terms of the above agreement.
I Agree
Cancel

6 Click "**Launch**".

7 This will launch your **Digital Editions**.

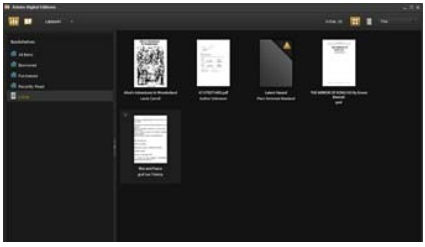

4.2 Authorising Your Computer

You can view your DRM-protected eBooks on more than one computer, if you have authorised all the computers on which you want to read them. After you have installed **Digital Editions**, authorising your computer is optional but highly recommended.

DRM-protected files are tied to you, who is the purchaser. If you authorise your computer before you download the DRM-protected book, then **Digital Editions** will tie the book to your **Digital Editions** account. You can authorise up to 6 different computers or devices

and copy your DRM-protected books between them. But if you did not authorise your computer before you download the book, then **Digital Editions** will tie the book to your specific computer. If you buy another computer later on, or even if you reinstall **Digital Editions** again, you will not be able to access any books you have already downloaded.

4.2.1 How do I authorise my computer?

The first time you run **Digital Editions** after installing it, the software will automatically help you authorise your installation. You will need an ID; if you do not have one, you can click on **get an ID online** to create one. Enter the email address associated with your ID and your password, then click "**Activate**".

If you have already installed **Digital Editions** and skipped authorising your computer, you can still authorise it at any time by running **Digital Editions** and selecting **Authorise Computer** from the **Library** menu:

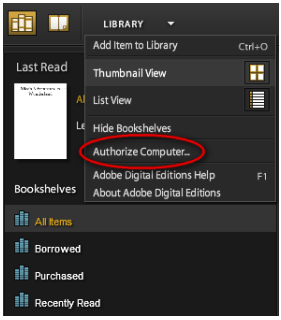

5 WHAT'S IN THE BOX?

The product pack includes:

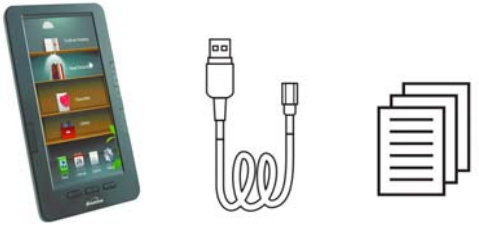

- Reader;
- Micro-USB cable (for charging and data transfer);
- User Guide.

Optional accessory pack (Sold separately):

- Leatherette case
- Charger
- 2GB Micro SD card

6 OVERVIEW OF THE PRODUCT

6.1 Front

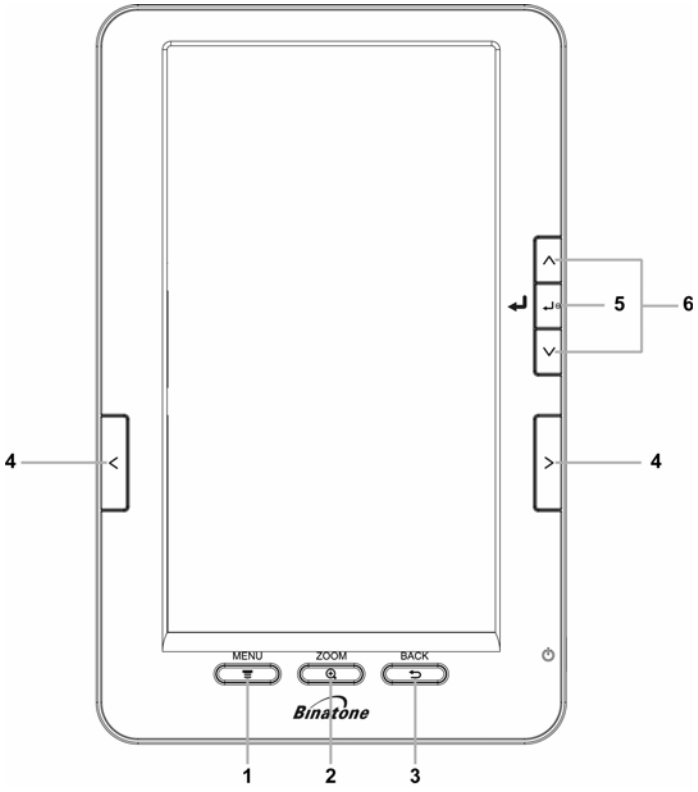

1 **Quick menu key**
Press in reading mode to access quick menu options.

2 **Zoom key**
In reading mode, press to adjust the text size of the page you are reading. There are 4 levels of zoom to choose from.

3 **Back**
Press to cancel an operation.
Press to exit from a sub menu and return to the previous menu.

4 **Left-Right Scroll keys**
Press to scroll left and right.

5 ↵ **Enter key**
Press to confirm an operation or select an option from the options list.

6 ^ / v **Up-Down Scroll keys**
Press to scroll up and down.

6.2 Bottom

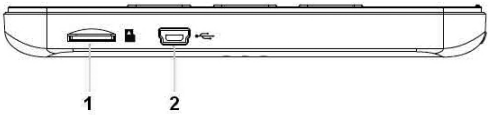

1 SD **Micro SD memory card slot**

2 ⇐ **USB port**
USB port for data transfer and charging.

6.3 Right Side

1 ⏻ **Power key**
Press and hold to power up the Reader.
Press and hold to power down the Reader.
Press to display screen saver and press any key to turn on the screen.

6.4 Back

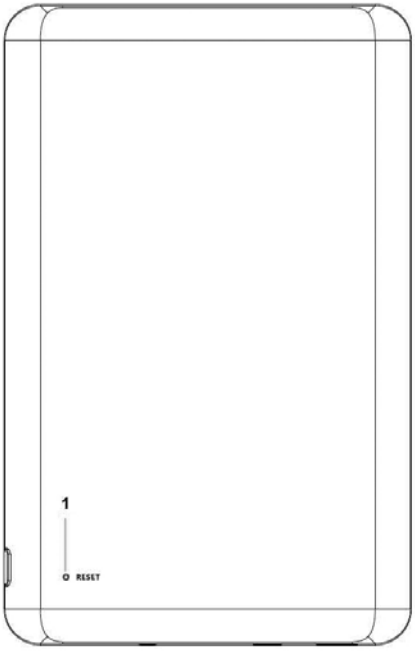

1 RESET button
If the Reader malfunctions (screen freezes or keys stop responding), press the reset button using a pointed object to reset the device.
Press ⏻ to restart the Reader.

Table of contents

1 WELCOME 1

2 IMPORTANT 1

3 WHERE CAN I GET eBOOKS FOR MY READER? 1

4 WHAT IS DIGITAL EDITIONS? 2

4.1 Installing Digital Editions on your computer 2

4.2 Authorising Your Computer 5

5 WHAT'S IN THE BOX? 7

6 OVERVIEW OF THE PRODUCT 8

6.1 Front 8

6.2 Bottom 9

6.3 Right Side 9

6.4 Back 10

7 GETTING STARTED 13

7.1 Charging the Battery 13

7.2 Inserting a memory card 14

7.3 Removing a memory card 14

7.4 Switching the eBook Reader On/Off 14

7.5 Resetting the eBook Reader 15

8 USING README COLOUR FOR THE FIRST TIME 15

8.1 Transferring files from your computer to the eBook Reader 15

8.2 Converting eBooks 17

9 USING THE eBOOK READER 18

9.1 What's on the display? 18

9.2 Basic menu operations 18

9.3 Reading an eBook 18

9.4 Create Bookmarks 20

9.5 Delete bookmarks 21

9.6 View Bookmark list 21

9.7 Go to a Bookmark entry 21

10 FAVOURITES 22

11 CONTINUE READING 22

12 READ RECORDS 22

13 VIEW PHOTOS 22
13.1 View photos 22
13.2 View photos as a slideshow 23
13.3 Turn Off slideshow 23
14 VIEW CALENDAR 24
15 FILE EXPLORER 25
15.1 View files and folders 25
15.2 Delete files and folders 25
16 SETTINGS 26
16.1 Refresh media file 26
16.2 Display Brightness 26
16.3 Backlight idle time 26
16.4 Auto Poweroff 26
16.5 Fonts 27
16.6 Default Settings 27
16.7 Language setting 27
16.8 Date and Time Setting 27
16.9 System Information 28
17 HELP/TROUBLESHOOTING 29
18 IF YOU NEED HELP... 30
19 SAFETY INSTRUCTIONS 30
20 REPLACING BATTERIES 31
21 CLEANING THE DEVICE 31
22 DISPOSAL OF THE DEVICE (ENVIRONMENT) 31
23 GUARANTEE AND SERVICE 31
24 TECHNICAL SPECIFICATIONS 32
25 DECLARATION OF CONFORMITY 33

7 GETTING STARTED

7.1 Charging the Battery

The rechargeable battery comes pre-installed within the Reader.
You can only charge the battery using the USB cable.

7.1.1 Charging with USB Cable connected to a computer

1 Connect the supplied USB cable to the USB port at the bottom of the eBook Reader and connect the other end to a computer or laptop.
*The eBook Reader shows **"Connecting to PC USB**".*

The battery starts charging automatically when the eBook Reader is connected to the computer.

7.1.2 Charging with USB Cable connected to external power source

You can also charge the Reader using an external power source by connecting the USB cable to a suitable 5V DC / 1A adaptor.

The battery indicator at the top right hand corner of the screen will start scrolling to indicate charging.

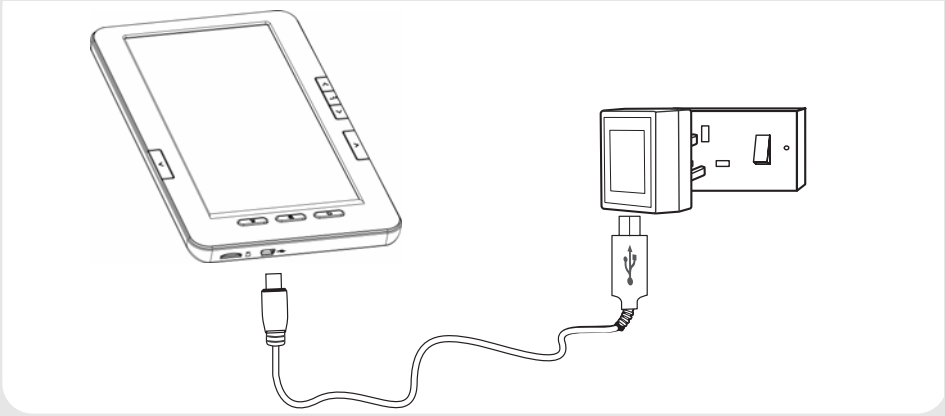

Note
It is normal for the Reader to get warm while charging or after using for an extended period of time.

A suitable 5V DC / 1A adaptor is sold separately.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN UNAUTHORISED PERSON.

7.2 Inserting a memory card

The eBook Reader has a slot for Micro SD memory card, of up to 16GB.

Insert the memory card into the card slot with its label side up until it clicks into place.

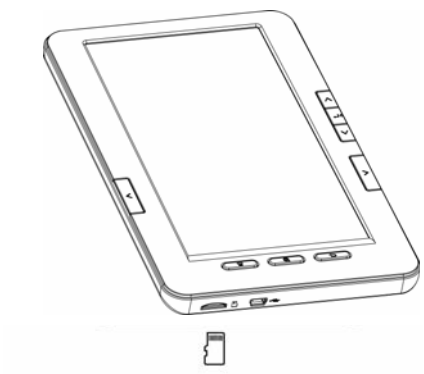

Note

Do not insert an incompatible memory card as it may cause the Reader to malfunction.

7.3 Removing a memory card

Push in the memory card. The memory card will pop out from its slot.

Note

Do not insert or remove the memory card when the Reader is reading from the card or writing data to the card, as this may cause data corruption.

7.4 Switching the eBook Reader On/Off

7.4.1 Switching On

Press and hold ⏻.

The eBook Reader enters the main menu automatically.

7.4.2 Switching Off

Press and hold ⏻.

7.5 Resetting the eBook Reader

Should the eBook Reader malfunction, such as the screen freezes or does not respond to any key presses, you can use the Reset button at the back of the Reader to restart it.

1 Insert a pointed object, like a ballpoint pen or a bent paper clip into the Reset Button slot on the back of the eBook Reader.

2 Press and hold the reset button for about 3 seconds.

3 Press and hold ⏻ to restart the eBook Reader.

Note

Do not apply too much pressure on the reset button.

8 USING README COLOUR FOR THE FIRST TIME

IMPORTANT

To ensure smooth operation of your eBook Reader, please charge it for at least 10 hours before using it for the first time.

8.1 Transferring files from your computer to the eBook Reader

Before you can start reading an eBook and enjoy photos on your Reader, you must first transfer them to the Reader.

You can transfer files from your computer to the Reader using the USB connection or transfer the files to a Micro SD card first and then insert the memory card into the Reader.

8.1.1 Transfer files using the USB connection

The eBook Reader must be switched on before you can establish a USB connection to your computer.

1 Press ⏻ to switch on the eBook Reader.

The eBook Reader enters the main menu automatically.

2 Connect the eBook Reader to your computer using the supplied USB cable.

*The eBook Reader screen shows "**Connecting to PC USB ...**".*

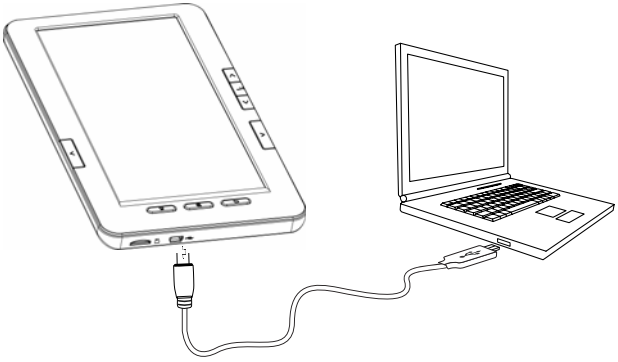

3 The *Removable Disk* of the Reader will be created in **"My Computer"**. If there is a Micro SD card in the Reader, you will see two *Removable Disks* created: one for the Internal Memory Drive and one for the memory card.

4 Drag and drop the file(s) into the respective folders of the memory card, or create a new folder in the memory card.

IMPORTANT

Do not disconnect the USB cable during file transfer. It may cause the device or files to malfunction.

5 Once the transfer is complete, click the "**Safely Remove Hardware**" icon on the system tray of your computer, select the eBook drive and disconnect the USB cable when confirmation is given that it is safe to remove.

You are ready to start reading your eBook on your Reader (see ***"Reading an eBook" on page 18***).

8.1.2 Alternative method to transfer files to a Micro SD card

1 Insert the Micro SD card into a card reader that is connected to your computer or a Micro SD card slot on your computer.

2 Once your computer has detected the Micro SD card, drag and drop the file(s) into the Micro SD card.

3 After you have transferred the file(s) into the Micro SD card, remove it from the card reader or Micro SD card slot on your computer, and insert it into the eBook Reader.

4 You are ready to start reading your eBook on your Reader (see ***"Reading an eBook" on page 18***).

8.2 Converting eBooks

The Reader supports eBooks in several formats, such as PDF, e-PUB, TXT and FB2. If you have eBooks that are not in any of these formats, we recommend that you use a freeware such as *calibre* to convert them into a supported format.

8.2.1 Using *calibre* for conversion

calibre is an eBook library application that helps you convert your eBooks into several formats that can be viewed with your eBook Reader. It is a **free** software. For more information on the usage of *calibre*, such as conversion settings, transferring and managing eBooks, please visit **http://manual.calibre-ebook.com/**.

Note

calibre will not convert eBooks that are DRM (Digital Rights Management) protected. For more advanced conversion options, please visit **http://manual.calibre-ebook.com/**.

Installing and setting up *calibre* on your computer

The *calibre* eBook software is provided on the basis of GNU General Public Licence v3.

The original author of *calibre* is Kovid Goyal.

The software is provided under no warranty and for use on a voluntary basis only.

Any problems arising from the use of the software are not by any means the responsibility of Binatone.

The latest software version and further information can be found on the Internet under **http://calibre-ebook.com/**.

It is recommended to use a memory card to transfer eBooks into the Reader using the **Save to disk** command.

1 Download the application from the Internet **http://calibre-ebook.com/download**

2 The *Welcome Wizard* starts when you run *calibre* on your computer for the first time. Follow the instructions to set up *calibre* on your computer.

9 USING THE eBOOK READER

9.1 What's on the display?

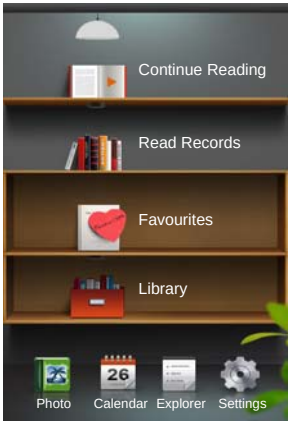

9.2 Basic menu operations

The eBook Reader enters the main menu automatically when powered up. The main menu displays the 8 menu functions.

- To select a menu option, press the ^ / v or < / > keys.

  A lamp will light up above the picture of the option you have selected.

- Press ↵ to enter the option.
- To return to the previous menu or cancel an operation, press ⮌.
- To return to the main menu, press ⮌ .

9.3 Reading an eBook

9.3.1 Selecting an eBook from the Library

1 From the main menu, press ^ / v to select **Library** and press ↵.

The eBooks stored in the Internal Memory and the memory card are shown on a "bookshelf" .

2 Press ^ / v or < / > to select the eBook that you wish to read.

A lamp will light up above the eBook that you have selected.

3 Press ↵ to enter reading mode to start reading the selected eBook.

If you have read the eBook before, it will open on the page you were reading last.

9.3.2 Key Operations in Reading mode

The following operations can be performed in reading mode:

Operation	Key
Move to the previous page	< or ^
Move to the next page	> or v
Return to the main menu	Press ⮌ repeatedly.

Hint

You can also select **Continue Reading** from the main menu to display the last eBook that you have read. For more information, please refer to ***"FAVOURITES" on page 22***.

9.3.3 Enlarge or Reduce text size

When reading an eBook, press 🔍 repeatedly to switch between the four different text sizes (small, medium, large, extra large).

Note:

Some file types may support less than four zoom levels.

9.3.4 Switch between Portrait and Landscape view

1 To switch the page view between portrait and landscape, press ☰ when reading an eBook.

2 Press < / > to select **Rotate** and press ↵.

9.3.5 Adjust Brightness

1 When reading an eBook, press ☰.

2 Press < / > to select **Brightness** and press ↵.

3 Press < / > to adjust the brightness of the screen. There are **5** levels of brightness to choose from.

4 Press ↵ to confirm and exit.

Hint

You can also adjust the brightness under **Settings**. For more information, please refer to **"Display Brightness" on page 26**.

9.3.6 Add to Favourites

1 When reading an eBook, press .

2 Press < / > to select **Add to Favourites** and press ↵.

*The screen shows "**Save ok!**"*

The book is saved to your **Favourites** *bookshelf. See "FAVOURITES" on page 22 on how to access your* **Favourites** *bookshelf.*

9.3.7 Jump to a specific page number

1 When reading an eBook, press .

2 Press < / > to select **Jump to page** and press ↵.

A Page Jump window appears.

3 Press < / > to shift to the different digit positions and press ^ / v to select the page number for each digit position.

4 When done, press ↵ to jump to the desired page.

9.3.8 Re-alignment

Note

This option is only available for ebooks in PDF format.

1 When reading an eBook, press .

2 Press < / > to select **Re-alignment** and press ↵.

The text in the eBook will be realigned to fit the width of the screen.

9.4 Create Bookmarks

You can create a bookmark on a page so that you can return to it later. You can create up to 10 Bookmarks for each book.

1 When reading an eBook, press ↵.

2 To create the bookmark, press ^ / v to select an **Empty** slot and press ↵.

A bookmark that corresponds to the current page that you are reading is created.

3 Press ↩ to exit.

9.5 Delete bookmarks

1 When reading an eBook, press [↵].

2 Press [^] / [v] to select the bookmark you wish to delete and press [↵].

3 Press [<] / [>] to select **X** and press [↵].

The bookmark is deleted.

4 Press [⮌] to exit.

9.6 View Bookmark list

1 When reading an eBook, press [↵].

A list of bookmarks is displayed.

9.7 Go to a Bookmark entry

1 When reading an eBook, press [↵].

A list of bookmarks is displayed.

2 Press [<] / [>] to select the bookmark and press [↵] twice to confirm.

The screen displays the page that contains the bookmark entry.

10 FAVOURITES

Displays your favourite books on a bookshelf.

1 From the main menu, press ^ / v to select **Favourites** and press ↵.

2 Press ^ / v or < / > to select a book and press ↵.

The last page read of the selected book is displayed.

See "Add to Favourites" on page 20 on how to save a book as **Favourites**.

11 CONTINUE READING

Displays the last page that you have read.

1 From the main menu, press ^ / v to select **Continue Reading** and press ↵.

The last page read is displayed.

12 READ RECORDS

Displays the books you have read on a bookshelf.

1 From the main menu, press ^ / v to select **Read Records** and press ↵.

2 Press ^ / v or < / > to select a book and press ↵.

The last page read of the selected book is displayed.

13 VIEW PHOTOS

You can view photos in JPEG, GIF, PNG and BMP formats on the eBook Reader.

13.1 View photos

1 From the main menu, press < / > to select **Photo** and press ↵.

If you have inserted a memory card, you will be prompted to select **Internal Memory** *or* **SD Card**.

2 Press ^ / v to select **Internal Memory** or **SD Card** and press ↵.

3 Press ^ / v to select the folder in which you have stored the photos and press ↵.

A list of folders and photos is displayed.

4 Press ^ / v to select a photo and press ↵ display the photo in full screen.

- Press v to rotate the photo to landscape mode, and press ^ to return it to portrait mode.
- Press < / > to display the previous or next photo in the folder.
- Press ⊕ to zoom in and out of the photo.

Note

When zoomed in to a photo, pressing ^ / v / < / > may move the photo on the screen instead of going to another photo; you must zoom out before using them for that function.

13.2 View photos as a slideshow

1 From the main menu, press < / > to select **Photo** and press ↵.

If you have inserted a memory card, you will be prompted to select **Internal Memory** *or* **SD Card**.

2 Press ^ / v to select **Internal Memory** or **SD Card** and press ↵.

3 Press ^ / v to select the folder in which you have stored the photos and press ↵.

A list of photos is displayed.

4 Press ^ / v to select a photo and press ↵ display the photo in full screen.

5 Press ☰ and press ^ / v to select **5 Sec**, **10 Sec**, **20 Sec** or **30 Sec** and press ↵.

A slideshow of the photos in the selected folder is played.

6 Press ↩ to stop slideshow and return to the previous menu.

13.3 Turn Off slideshow

1 From the main menu, press < / > to select **Photo** and press ↵.

If you have inserted a memory card, you will be prompted to select **Internal Memory** *or* **SD Card**.

2 Press ^ / v to select **Internal Memory** or **SD Card** and press ↵.

3 Press ^ / v to the select folder in which you have stored the photos and press ↵.

A list of photos is displayed.

4 Press ^ / v to select a photo and press ↵ display the photo in full screen.

5 Press ☰ and press ^ / v to select **Turn Off** and press ↵.

14 VIEW CALENDAR

1 From the main menu, press < / > to select **Calendar** and press ↵.

A month calendar is displayed for the current day.

Press ^ / v / < / > to move to other weeks or days.

2 Press ⮌ to exit and return to the main menu.

15 FILE EXPLORER

15.1 View files and folders

1 From the main menu, press [<] / [>] to select **Explorer** and press [↵].

If you have inserted a memory card, you will be prompted to select **Internal Memory** *or* **SD Card***.*

2 Press [^] / [v] to select **Internal Memory** or **SD Card** and press [↵].

A list of files and folders is displayed.

3 Press [^] / [v] to select a file or folder and press [↵] .

4 Press [<] / [>] to select **open** and press [↵].

15.2 Delete files and folders

1 From the main menu, press [^] / [v] / [<] / [>] to select **Explorer** and press [↵].

If you have inserted a memory card, you will be prompted to select **Internal Memory** *or* **SD Card***.*

2 Press [^] / [v] to select **Internal Memory** or **SD Card** and press [↵].

A list of files and folders is displayed.

3 Press [^] / [v] to select a file or folder and press [↵].

4 Press [<] / [>] to select **Del** and press [↵].

5 Press [<] / [>] to select **YES** and press [↵] to delete or select **NO** and press [↵] to cancel.

16 SETTINGS

16.1 Refresh media file

1 From the main menu, press [<] / [>] to select **Settings** and press [↵].

2 Press [^] / [v] to select **Refresh media file** and press [↵].

The Reader will start to update the media library.

16.2 Display Brightness

1 From the main menu, press [<] / [>] to select **Settings** and press [↵].

2 Press [^] / [v] to select **Display Brightness** and press [↵].

3 Press [^] / [v] to adjust screen brightness *(Level One to Five)* and press [↵] to confirm.

4 Press [⮌] to exit and return to the main menu.

Hint

The brighter the backlight, the more battery power is consumed.

16.3 Backlight idle time

1 From the main menu, press [<] / [>] to select **Settings** and press [↵].

2 Press [^] / [v] to select **Backlight idle time** and press [↵].

3 Press [^] / [v] to select **Backlight** duration and press [↵] to confirm.

If you select **10 Seconds***, the screen will automatically black out after 10 seconds of inactivity. If you select* **Always On***, the screen will remain lighted.*

4 Press [⮌] to exit and return to the main menu.

Hint

- The longer the lightime duration, the more battery power is consumed.
- Press any key to re-activate screen backlight.

16.4 Auto Poweroff

1 From the main menu, press [<] / [>] to select **Settings** and press [↵].

2 Press [^] / [v] to select **Auto Poweroff** and press [↵].

3 Press [^] / [v] to select an auto power off duration and press [↵] to confirm.

If you select **5 Minutes***, the Reader will shut down automatically after 5 minutes of inactivity. To disable auto shut down, select* **No automatic shutdown***.*

4 Press [⮌] to exit and return to the main menu.

16.5 Fonts

1. From the main menu, press < / > to select **Settings** and press ↵.
2. Press ^ / v to select **Fonts** and press ↵.
3. Press ^ / v to select a font type and press ↵ to confirm.

   The screen font automatically switches to the font you have selected.
4. Press ⮌ to exit and return to the main menu.

16.6 Default Settings

1. From the main menu, press < / > to select **Settings** and press ↵.
2. Press ^ / v to select **Default Settings** and press ↵.
3. Press < / > to select **YES** or **NO** and press ↵ to confirm.

   If you select **YES***, the Reader settings will be restored to factory settings.*
4. Press ⮌ to exit and return to the main menu.

16.7 Language setting

1. From the main menu, press < / > to select **Settings** and press ↵.
2. Press > to go to the **Languages** tab.
3. Press ^ / v to select a display language and press ↵.

   The display text automatically switches to the language you have selected.
4. Press ⮌ to exit and return to the main menu.

16.8 Date and Time Setting

1. From the main menu, press < / > to select **Settings** and press ↵.
2. Press > to go to the **Date and Time** tab.
3. Press v to select **Hour** setting and press ^ / v to set the hour (12-hour format).
4. Press > to select **Min** setting and press ^ / v to set the minutes.
5. Press > to select **Year** setting and press ^ / v to set the year.
6. Press > to select **Month** setting and press ^ / v to set the month.
7. Press > to select **Day** setting and press ^ / v to set the day.
8. Press ⮌ to exit and return to the main menu.

16.9 System Information

1 From the main menu, press < / > to select **Settings** and press ↵.

2 Press < / > to go to the **System Information** tab.

The system software, internal memory status (free and total) and SD card memory status (free and total) are displayed.

3 Press ⮌ to exit and return to the main menu.

17 HELP/TROUBLESHOOTING

The product is not working properly or locks up

Reset the Reader by pressing the RESET button at the back of the Reader using a pointed object. Press and hold ⏻ to re-start the Reader.

The eBook cannot be read

Check the format of the book. See ***"TECHNICAL SPECIFICATIONS" on page 32*** for the formats supported by the Reader.

The photo cannot be viewed

Check the format of the photo file. See ***"TECHNICAL SPECIFICATIONS" on page 32*** for the formats supported by the Reader.

The Reader cannot be read on my Computer

- Check that you have turned on the Reader and confirmed the PC connection mode. See ***"Transfer files using the USB connection" on page 15***;
- Check that you have properly connected the Reader to the computer with the USB cable; the Reader must be connected to the computer directly, and not through a USB hub or extension cable. If the problem persists, disconnect the USB cable from the Reader and reconnect.

Digital Editions cannot detect my Reader after I format the device

- Run a reset operation to restore your Reader to its factory default settings. See ***"Default Settings" on page 27***.

Files from the computer cannot be transferred to the Reader

- Check that the USB cable has been properly connected;
- There is not enough free space on the Reader. Transfer the files to a memory card or remove some files from the Reader to free up space because you cannot store files on the internal memory.

The Reader did not start charging when connected to the AC power

- Check that the power cable has been properly connected. See ***"Charging the Battery" on page 13***.

The memory card cannot be recognised by the Reader

- Check the format and size of the memory card. See ***"TECHNICAL SPECIFICATIONS" on page 32*** for the formats and sizes supported by the Reader;
- Check that you have inserted the memory card correctly. See ***"Inserting a memory card" on page 14***.
- Connect the Reader to a PC and re-format the internal memory.

Files cannot be transferred to the Memory Card

There is not enough free space on the memory card. Remove some files from the memory card to free up space.

18 IF YOU NEED HELP...

The Binatone Helpline is available from 9.00 am to 5.00 pm,
Mondays to Fridays, please call

0845 345 9677 for UK, 0818762092 for Eire (Local call rate)

19 SAFETY INSTRUCTIONS

• Do not let the Reader come into contact with liquid. If it gets into water, switch off the Reader immediately as continuing use may cause fire or electric shock;

• Do not expose the Reader to extreme high temperatures or humidity;

• Electrical equipment can cause serious injury if you use it when you are wet or standing in water;

• Do not use the Reader near explosives or flammable gas as it may cause explosion;

• Do not let any metal or combustible materials get into the Reader through the memory card slot or USB slot, as this may cause fire or electric shock;

• The Reader is a precision electronic device. Handle it with care as the TFT screen may become damaged when dropped;

• Unauthorised disassembling of the Reader in any manner may damage the device, and is not covered by the warranty.

• Do not place the Reader close to anything with strong magnetic power. Strong magnets may cause malfunction to the Reader or the screen. In addition, do not use the Reader close to strong radio waves as this may damage the data in the Reader.

• Please insert the memory card correctly. If the memory card cannot be inserted, please check whether the Reader supports it or the card is inserted in the correct direction. Forced insertion may damage the Reader.

20 REPLACING BATTERIES

The battery is not a user-replaceable part. If you think the battery needs replacing, please call the Binatone Helpline:
0845 345 9677 for UK, 0818762092 for Eire (Local call rate)

21 CLEANING THE DEVICE

- Do not clean any part of the product with thinners or other solvents and chemicals - this may cause permanent damage to the product which is not covered by the warranty.
- When necessary, clean it with a damp cloth.
- Keep your product away from hot, humid areas or strong sunlight, and do not let it get wet.
- Every effort has been made to ensure high standards of reliability for your product. However, if something does go wrong, please do not try to repair it yourself - contact the Binatone Helpline for assistance.

22 DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.

Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

23 GUARANTEE AND SERVICE

This product is guaranteed for 12 months from the date of purchase shown on your sales receipt. The Guarantee does not cover damage by misuse or negligence, or by excessive voltages — for example, lightning.

Please keep your sales (till) receipt — this is your guarantee. You should also keep the original packaging material.

24 TECHNICAL SPECIFICATIONS

External dimensions	194.5mm x 123.6mm x 12.8mm
Display screen	7-inch TFT LCD, resolution 800 x 480
Supported eBook formats	PDF, e-PUB, TXT and FB2
Supported photo formats	JPEG, GIF, PNG and BMP
Supported Micro SD card	Up to 16GB
Built-in battery capacity	Li-polymer rechargeable battery
Power supply	USB Adaptor; 5V DC / 1A *(Sold separately)*
Operating temperature	0 - 45ºC
Storage temperature	-20 - 60ºC

25 DECLARATION OF CONFORMITY

Hereby, BINATONE ELECTRONICS INTERNATIONAL LTD. declares that this eBook Reader is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

CE

Binatone

innovation imagination